



TROUBLE CONDITIONS

How To Determine The Type Of System Fault

To determine all system faults other than the AC mains supply, enter fault analysis mode by following the steps outlined below.

1. Hold down button 5 until two beeps are heard.
The FAULT indicator will remain steady and the STAY and AWAY indicators will flash in unison with each other.

Any zone indicators displayed indicate the type of fault that has occurred. Refer to item 4.
2. To further determine the type of fault condition, you will need to hold down the button that corresponds to the zone indicator displayed.
3. To exit fault analysis mode and return to the disarmed state, press the # button. The FAULT indicator will remain displayed and the keypad will cease its once a minute beep.

4.

Zone Indicator	Fault Description
1	Battery Fail
2	Date and Time
3	Sensor Watch
4	Horn Speaker Fail
5	Telephone Line Fail
6	E2 Fault
7	Fuse Fail
8	Communication Fail

For further assistance please advise the service company what fault light is showing, please call Prowler Security Service department on 07 73 5070