

To set or unset your Bosch alarm.

Residential

If leaving your home enter your pin number followed by the **Away button, or hash button (#)**

There is a shortcut to this, but Prowler Security recommends using your pin number for arming.

Please do not use STAY button if leaving your property always use the Away option, we have found some panels do not communicate when the alarm is set when Stay is used as it has not been programmed.

Stay is used to arm partial parts of the alarm.

An example of this is a two story house. You stay arm down stairs while upstairs stays disarmed.

This would alert the home owner to intruders downstairs while the upstairs was not armed.

There is confusion with this so if you are unsure please ask your installer to explain how your alarm is setup.

STAY button or Star button (*) will light when this button used to arm the system.

To unset enter your alarm code press **AWAY (#)** button to disarm when **AWAY** light is on.

To unset enter your alarm code press **STAY (*)** button to disarm when **STAY** light is on.